Modulo Doorsets. By Selo

Rev. 1 SEL-PRT-02739

Required tools:













Pencil Tape Measure

asure Screwdrivers

Laser Level

Drill Driver

Chop Saw



Installation Guide


Standard Doorsets (NFR)


Technical support

For advice and guidance regarding your Modulo installation please get in touch: call 020 3880 0339 email info@modulodoorsets.com

Components

Identify the components prior to installation. Components may vary depending specification ordered, other components may also be included that are not shown here. Please refer to your schedule to ensure you have everything.

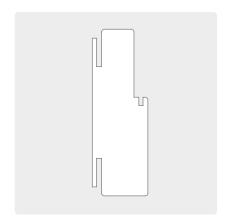

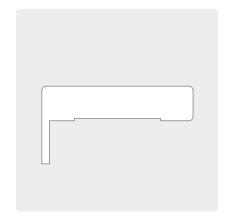



Frame Sections

Architrave Sections

Door Leaf







Butt Hinges


Frame installation


Modulo Doorset does not require timber or metal studwork reveals to be lined for compliance with EN 1634-1 and BS476-22:1987.

1. Check opening

- **1.1** It is important to ensure the opening is square and level. A laser level is ideal for this. Also check the structural opening (S/O) dimensions are correct.
- **1.2** Check the frame sections can be positioned correctly ensuring no more than 20mm gap at any point between the frame and the structural opening.

Note. If the door is pre-hung, the door can be removed by removing the temporary gold-coloured screws from the hinge on the frame side.

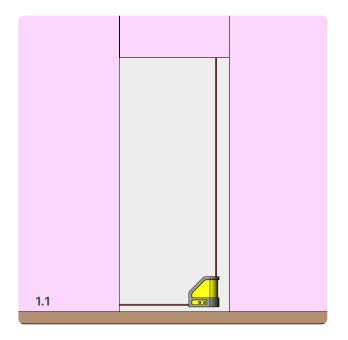

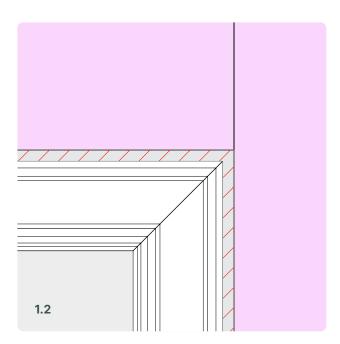

2. Frame undercut

If your door frame is supplied over-sized, the vertical jambs should be trimmed to achieve an undercut of **3mm to 8mm (2.1)**.

If a **Drop Seal** is fitted an undercut of between **5mm to 8mm** is recommended.

3. Frame assembly


If supplied unassembled

Identify correct orientation of jambs and head.




Insert wooden dowels into prepared holes in the top of each jamb. Apply a small amount of PVA adhesive to one face of the joint (optional). Attach head section to top of each jamb and ensure joint is tight and true (3.1).

Using 1 No. **5×60mm** (supplied), screw each side to securely affix the head to the jambs through the predrilled holes. Check joint is tight and correctly aligned and remove any surplus adhesive (**3.2**).

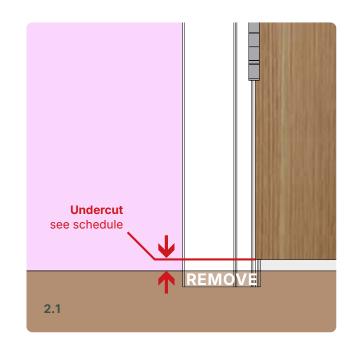



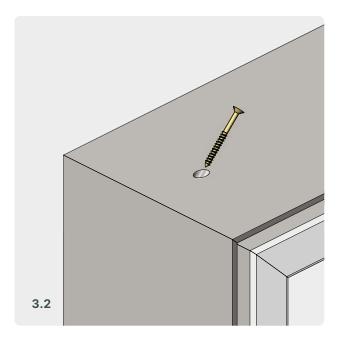

4. Hinge Jamb fixingBoth sides for double door

Stand frame into opening and ensure that it is located centrally and vertical in both dimensions. Fix hinge jamb(s) to the structure using suitable fixings and packers.

Note. Modulo Doorsets allow the use of both timber and standard plastic packers while complying with EN1634-1 and BS 476-22:1987. **Packers should be positioned behind each fixing** to ensure the frame is not deformed by the fixings.

Locate fixings through the stop (4.1).


Jamb fixings must be positioned at no more than 100mm from the top and bottom and at no more than 450mm centres (4.2).


Screws should be a minimum of **5mm gauge** of sufficient length to ensure a **50mm minimum penetration** into the supporting structure.

If rapid-fit brackets are specified, please see:

SEL-PRT-02743

Modulo - Rapid-fit Brackets Installation Guide.pdf

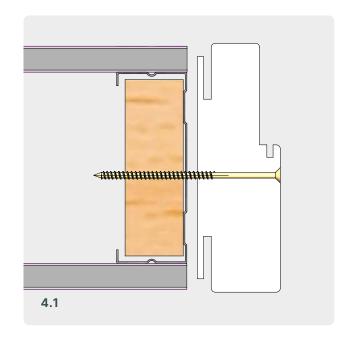

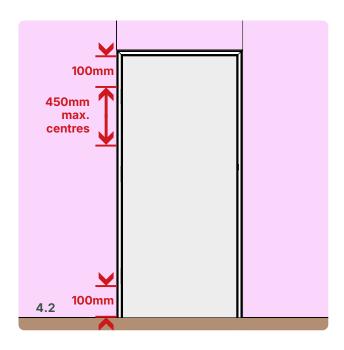

5. Install Strike JambSingle door only

Fix strike jamb by aligning with leading edge of door leaf ensuring that correct gaps are maintained. Adjust as required and check door operates smoothly and correctly. Fix strike jamb to the structure using suitable fixings and packers.

Note. Modulo doorsets allow the use of both timber and standard plastic packers while complying with EN1634-1 and BS 476-22:1987. **Packers should be positioned behind each fixing** to ensure the frame is not deformed by the fixings.

Locate fixings through the stop (5.1).

Jamb fixings must be positioned at no more than **100mm from the top and bottom** and at no more than **450mm centres (5.2)**.

Screws should be a minimum of **5mm gauge** of sufficient length to ensure a **50mm minimum penetration** into the supporting structure.

If rapid-fit brackets are specified, please see:

SEL-PRT-02743


Modulo - Rapid-fit Brackets Installation Guide.pdf


6. Frame Head


If you are fitting a **single door**, a screw through the head is **not required**.

Double doors require a single screw fixing in the centre of the head **(6.1)**. Fixings locate through the stop.

Check gaps and function of the door before moving on.

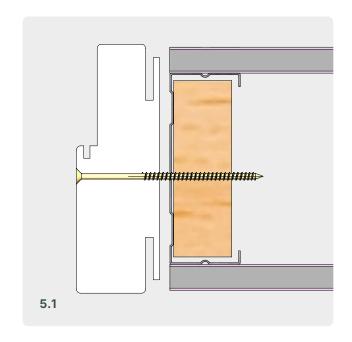

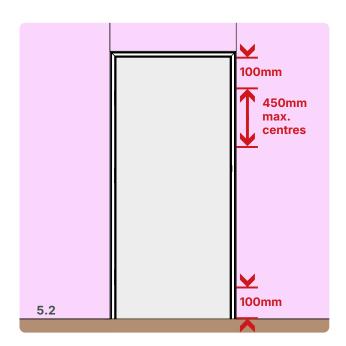

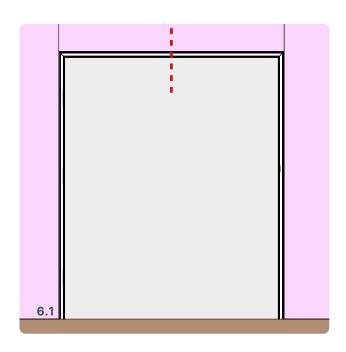

Architrave installation


(Optional)


The Architrave can be pinned or glued in place. If glued, use an adhesive that has been tested in the same situation.

7. Prepare Architrave

The **head architrave** is delivered pre-mitred (where applicable machined for Hoffmann® jointing). The **jamb architraves** are mitred one end (where applicable machined for Hoffmann® jointing) and oversized for trimming by installer (7.1).

To install the architrave push the 'tongue' of architrave firmly into the frame groove. The architrave joints can be bonded with a suitable adhesive, remove any excess (7.2). Adhesive must not go into the frame groove.

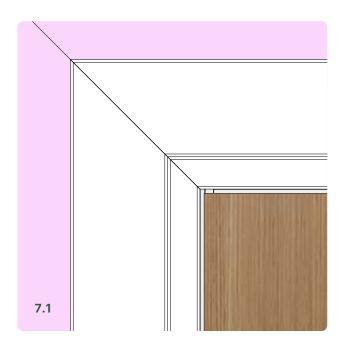

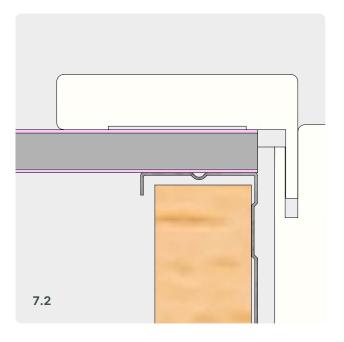

Adjustments

When fitting ModuCore PB double doors it may be necessary to adjust the meeting edges and/or the hinges to ensure a consistent gap between 2-4mm.

8. Hinges and final adjustments

Remove the temporary gold-coloured screws fixing the hinge to the frame. Replace with the permanent stainless-steel screws **4.5×25mm** supplied **(8.1)**. The longer screws will pick up the stud behind.

Hinge alignment/location can be assisted by temporarily loosening the leaf hinge screws. Ensure all gaps to the top and vertical edges of the door leaves are between **2-4mm**.



ModuCore BB door leaves are provided with **ABS lippings (1.5-2.0mm) which cannot be trimmed.** Check with your schedule or supplier to clarify the lipping type.

If provided with a ModuCore PB leaf, the lipping can be reduced to a minimum thickness of **8mm**. **Please check your lipping size before machining**.

A 2.5° chamfer is permitted to assist with operation (9.1).





Final checks

It is important to complete the following final checks and adjustments to complete the installation of your doorset.

10. Dropseal

If a dropseal is fitted, after installation of the final floor covering, adjust the dropseal travel by rotating the nylon screw (10.1) at the hinge edge of the door, ensuring it drops sufficiently when the door is closed (10.2).

11. Ironmongery

Where using 'bolt through' fixings for pull handles the hole must be no more than 1mm larger than the bolt diameter.


Fit surface mounted ironmongery in accordance with instructions ensuring that all fixing screws and bolts are used (11.1).

12. Finishing and protection


Modulo doors are suitable only for internal use in a dry environment. **Any cut or unfinished surfaces/edges should be coated** to provide protection from small amounts of moisture that may be present (12.1).

Do not paint over fire labeling pre-applied to the door.



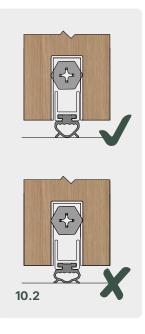



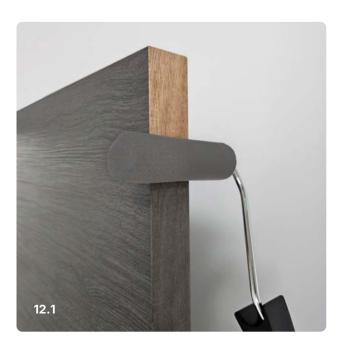



INNOVATION BY SELO.

Installation support 020 3880 0339

Email support@modulodoorsets.com




Storage requirements


All components are provided in protective packaging for transit, they may be stored in their transit packaging until ready for installation. Once unwrapped it is important to lay components flat with the load evenly spread.


Always lay the doors FLAT with the load spread evenly.


Incorrect storage could result in your doors warping, twisting or bowing.

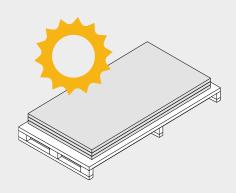



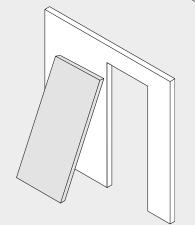

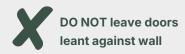

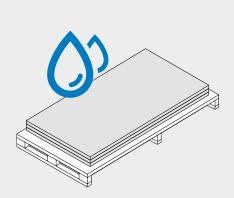



© 2025 by Modulo. All rights reserved.

No part of this publication may be reproduced in any material form (including photocopying or storing it in any medium by electronic means and whether or not transiently, or incidentally to some other use of this publication) without the written permission of the copyright owner. Application for the copyright owner's permission to reproduce any part of this publication should be addressed to Modulo Doorsets.

Modulo Doorsets reserve the right to alter specification and designs without prior notice.