

Installation Guide Rapid-fit Brackets

If supplied, frames may be positioned using rapid-fit steel angle brackets. Brackets allow for easier installation, making a one-person install safe and effective.



1. Fix brackets to the frame

Position the steel angle brackets on both vertical edges of the frame, three per side (1.1). Fix the brackets to the pull side of the frame using **4×25mm screws**, two per bracket (1.2).


Note. Fixing through the frame is **still required**, as per the main installation guides:

SEL-PRT-02739

Modulo - Standard (NFR) Installation Guide.pdf

SEL-PRT-02740

Modulo - Fire Rated Installation Guide.pdf

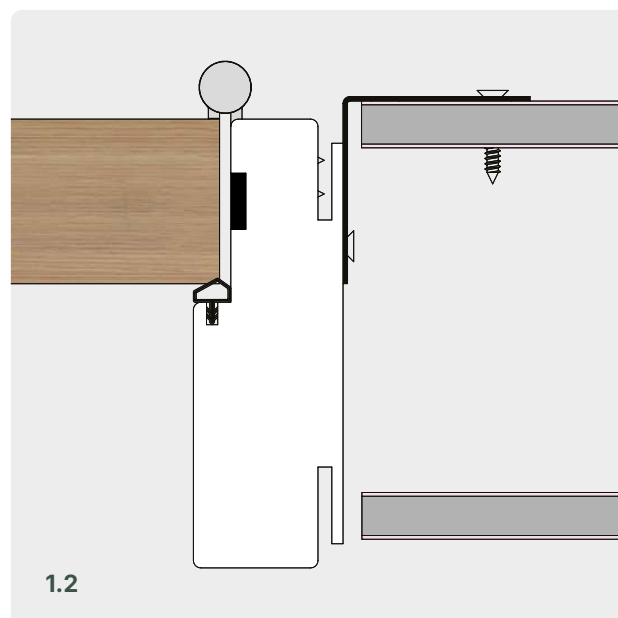

Technical support

For advice and guidance regarding your Modulo installation please get in touch:

call 020 3880 0339 **email** info@modulodoorsets.com